

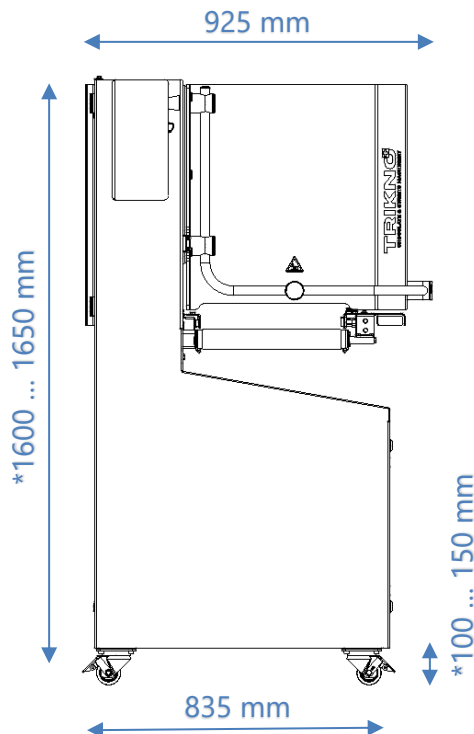
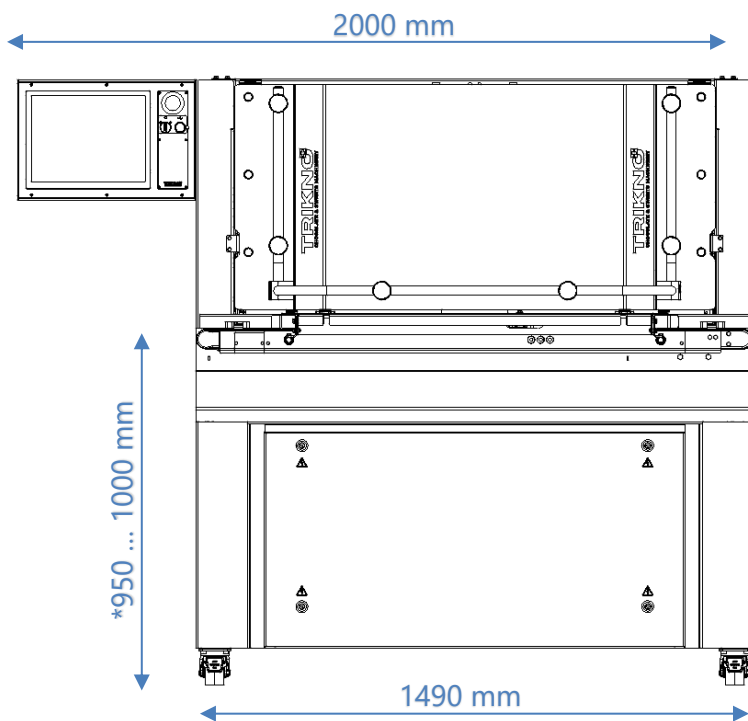


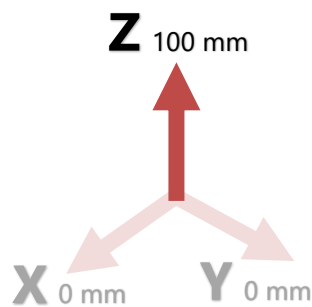

Technical Data Sheet TCM Omega

Depositor with proven single-rotary piston system, powered entirely by electric servo motors.
Wide range of applications.

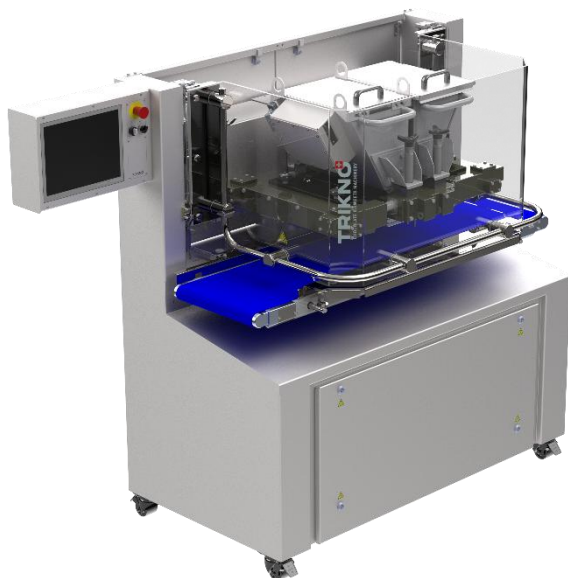

*dependig on each other

	9, one sided - Single	9/18, two sided - Boxer
Liner width	35 mm	
Piston distance	35 mm	
Stroke	32 mm	
Mould width	175 ... 400 mm	
Weight	800 kg	850 kg



Characteristics

- Depositor head movable in Z-axis 100 mm with electric servo motors
- High-precision single rotary piston system with identical dosing strokes (proven for more than 30 years)
- No mixing of masses between the pistons possible (1 piston = 1 nozzle)
- This depositor is designed for artisanal or for laboratory applications
- Quick changeover of depositing elements (pistons/liners/nozzle plates) without additional tools
- Each piston can be easily activated or deactivated by individual couplings
- All stainless steel and ALTEF®-coated aluminium parts are resistant to media with a pH value between 4 and 8
- Easy cleaning of the pistons and liners (no necessary tools for disassembly)
- 15" Colour touchscreen HMI in resolution 1024×768 pixels
- Depositor head in free-arm design for easy operation / cleaning / adjustment
- Fully digital machine control
- Remote maintenance on PLC, HMI, servo drives possible
- Software designed for maximum accuracy and flexibility
- Production software already installed on every machine (e.g. One Shot on Boxer)
- Double-walled hopper for the chocolate side

Variants




- Operating variants as Single (pistons on one side for solids) or Boxer (pistons on both sides for One Shot)
- HMI screen on the left or on the right side
- Belt running direction from left to right or from right to left
- LAN- or WLAN-Modem
- Different piston diameters

Options

- Double-walled hopper for filling side
- Piston drip lubrication system for sugar based masses
- Linear agitator for one or both hoppers
- Divided hopper on chocolate or filling side for Triple Shot setup: 1 filling / 2 shells OR 2 fillings / 1 shell
- Various nozzles and nozzle plates (e.g. curtain, swivel, One Shot, ...)



Dimensions of Cylinder liners and pistons

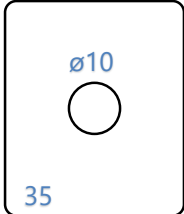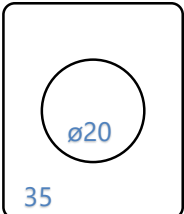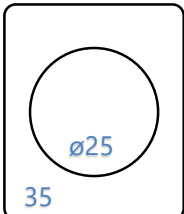Liner width 35 mm Stroke 32 mm			
	Ø10 35	Ø20 35	Ø25 35
Piston- Ø	10 mm	20 mm	25 mm
Volume	2.5 ml	10.1 ml	15.7 ml
	~3 g	~12.1 g	~18.9 g
Recommendations	Lids or drops	Bars with or without small inclusions	Bars with or without small inclusions

Example 1: 100g bars without filling (solid)

TCM Omega 9/18

Cylinder liner 2x9-35/1-Ø25 (6 pistons for one bar)

3 bars, 20 strokes/min at 60 min/h results in:

➤ **3'600 bars/h or 360 kg/h**

Example 2: 10g filled One Shot Chocolates

TCM Omega 9/18

Cylinder liner 2x9-35/1-Ø20 (1 piston on each side)

9 chocolates, 16 strokes/min at 60 min/h results in:

➤ **8'640 chocolates/h or 86.4 kg/h**



Possible Applications



- Bars without filling
- Bars with small inclusions up to 3 mm



- Filled chocolates (One Shot-2 colours)
- Filled chocolate bars (One Shot-2 colours)
- Filled chocolates (Triple Shot-3 colours)
- Filled chocolate bars (One Shot Curtain-2 colours)



- Fillings for Macarons
- Fillings for Alfajores

