

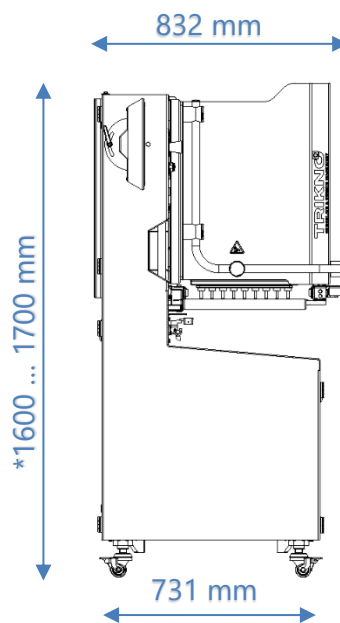
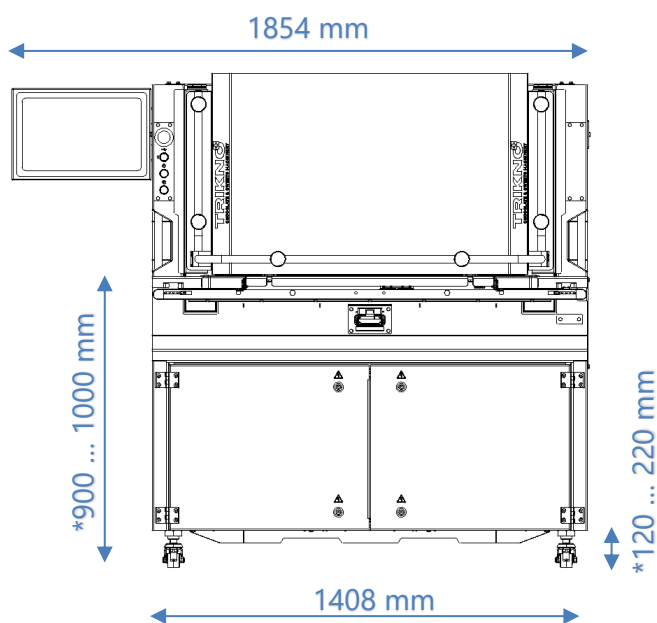


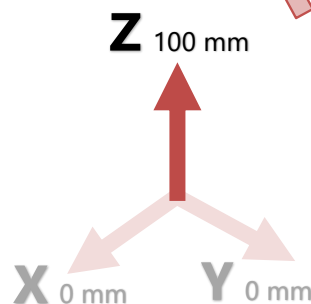

Technical Data Sheet TCM Omega compact

Depositor with proven single-rotary piston system, powered entirely by electric servo motors.
Wide range of applications.

NEW

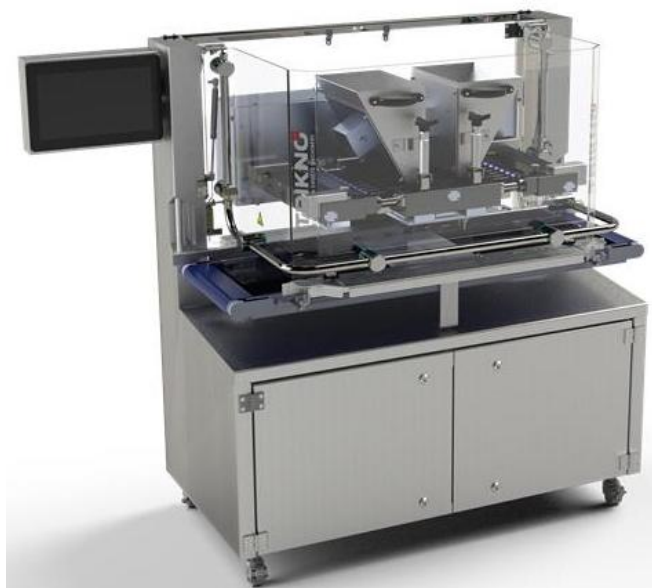

* depending on each other

	9, one sided - Single	9/18, two sided - Boxer
Liner width	105 mm (3 × 35 mm)	
Piston distance	35 mm	
Stroke	52 mm	
Mould width	175 ... 405 mm	
Weight	500 kg	550 kg



Characteristics

- Depositor head movable in Z-axis 100 mm with electric servo motors
- High-precision single rotary piston system with identical dosing strokes (proven for more than 30 years)
- No mixing of masses between the pistons possible (1 piston = 1 nozzle)
- This depositor is designed for artisanal or for laboratory applications
- Quick changeover of depositing elements (pistons/liners/nozzle plates) without additional tools
- Each piston can be easily activated or deactivated by individual couplings
- All stainless steel and ALTEF®-coated aluminium parts are resistant to media with a pH value between 4 and 8
- Easy cleaning of the pistons and liners (no necessary tools for disassembly)
- 15" Colour-Touchscreen HMI with a resolution of **1920×1080** pixels
- Depositor head in free-arm design for easy operation / cleaning / adjustment
- Fully digital machine control
- Remote maintenance on PLC, HMI, servo drives possible
- Software designed for maximum accuracy and flexibility
- Production software already installed on every machine (e.g. One Shot on Boxer)
- Lightweight hoppers for the chocolate and the filling side

Variants





- Operating variants as Single (pistons on one side for solids) or Boxer (pistons on both sides for One Shot)
- HMI screen on the left or on the right side
- Belt running direction from left to right or from right to left
- LAN- or WLAN-Modem
- Different piston diameters

Options

- Divided hopper on chocolate or filling side for Triple Shot setup: 1 filling / 2 shells OR 2 fillings / 1 shell
- Various nozzles and nozzle plates (e.g. curtain, swivel, One Shot, ...)



Dimensions of Cylinder liners and pistons

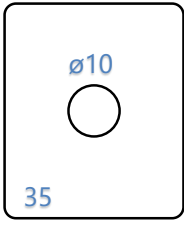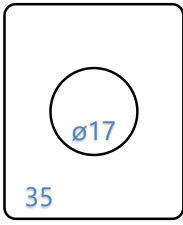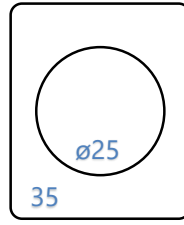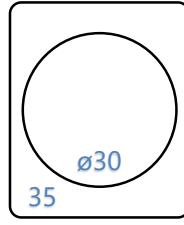Liner width 35 mm Stroke 52 mm				
Piston- Ø	10 mm	17 mm	25 mm	30 mm
Volume	4.1 ml	11.8 ml	25.5 ml	36.8 ml
	~4.9 g	~14.2 g	~30.6 g	~44.1 g
Recommendations	Lids or drops	Bars with or without small inclusions	Bars with or without small inclusions	Bars with or without small inclusions

Example 1: 100g Bars without filling (solid)

TCM Omega compact 9/18

Cylinder liner 2x9-35/1-ø30 (3 pistons for one bar)

6 bars, 20 strokes/min at 60 min/h results in:

➤ **7'200 bars/h or 720 kg/h**

Example 2: 10g filled One Shot Chocolates

TCM Omega compact 9/18

Cylinder liner 2x9-35/1-ø17 (1 piston on each side)

9 chocolates, 16 strokes/min at 60 min/h results in:

➤ **8'640 chocolates/h or 86.4 kg/h**



Possible Applications



- Bars without filling
- Bars with small inclusions up to 3 mm



- Filled chocolates (One Shot-2 colours)
- Filled chocolate bars (One Shot-2 colours)
- Filled chocolates (Triple Shot-3 colours)
- Filled chocolate bars (One Shot Curtain-2 colours)



- Fillings for Macarons
- Fillings for Alfajores

